

# PoEz PDS User Guide

Item No. 256318PDS


## PDS directly connect to PSE

- ● : PSE (Power Source Equipment) is not sending power to PDS
- ☀ ● : PSE is sending power by pair 12-36
- ☀ : PSE is sending power by pair 45-78
- ☀ ☀ : PSE is sending power by pairs 12-36 and 45-78

## PoEz connects PSE on one side and PDS on the other side

PSE is not sending power to PDS

	PoEz	PDS
Voltage	0V	● ●
Current	0A	
Power	0W	

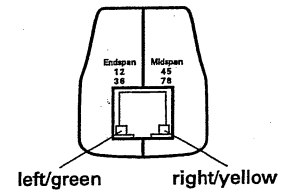

## PSE is sending power by pair 12-36 or 45-78

	PoEz	PDS
Voltage	44~57V	☀ ●
Current	0.02A	● ☀
Power	1~2W	

## PSE is sending power by pairs 12-36 and 45-78

	PoEz	PDS
Voltage	50~57V, 50~57V	☀ ☀
Current	0.02A, 0.02A	
Power	1~2W, 1~2W	

## Warning!!!

To avoid tester damage by high voltage static electricity, please connect PoEz by STP cable or carefully do not touch PoEz jack by hand.