


Installation Instruction

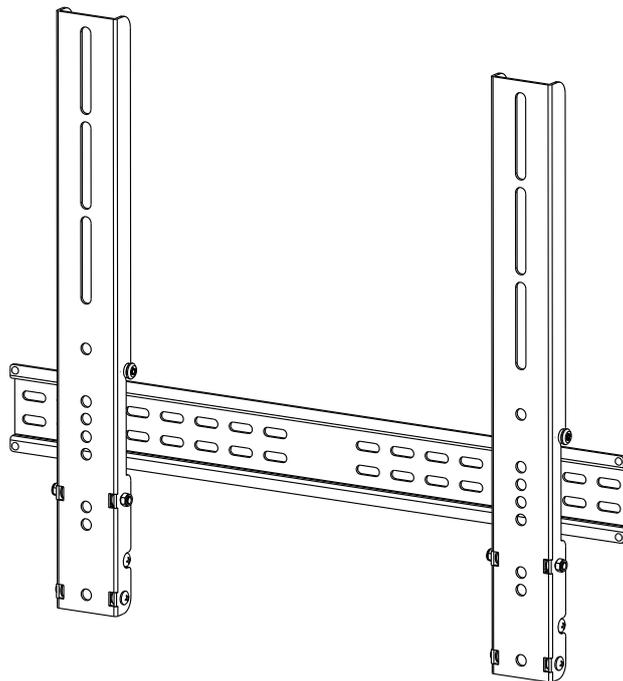

UNPACKING INSTRUCTIONS

- Carefully open the carton, remove contents and lay out on cardboard or other protective surface to avoid damage.
- Check package contents against the Supplied Parts List in the next page to assure that all components were received undamaged. Do not use damaged or defective parts.
- Carefully read all instructions before attempting installation.

IMPORTANT SAFETY INFORMATION

Install and operate this device with care. Please read this instruction before beginning the installation, and carefully follow all instructions contained herein. Use proper safety equipment during installation.

Please call a qualified installation contractor for help if you:

- If you don't understand these directions or have any doubts about the safety of the installation.
- If you are uncertain about the nature of your wall, consult a qualified installation contractor.

Do not use this product for any purpose or in any configuration not explicitly specified in this instruction. We hereby disclaim any and all liability for injury or damage arising from incorrect assembly, incorrect mounting, or incorrect use of this product.



WARNING


CAUTION!

This TV mount must be securely attached to the vertical wall. If the mount is not properly installed it may fall, resulting in possible injury and/or damage.


Tools Required	■ 4mm Drill Bit	■ 8mm Masonry Bit	■ Wrench or Socket Set
	■ Phillips Screwdriver	■ Stud Finder	■ Carpenter's Level

Note: The mounting components and hardware supplied in this package are not designed for installations to walls with steel studs or to cinder block walls. If the hardware you need for your installation is not included, please consult your local hardware store for proper mounting hardware for the application.

Supplied Parts List

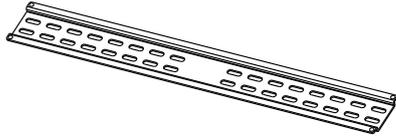

(1)Wall Plate-a

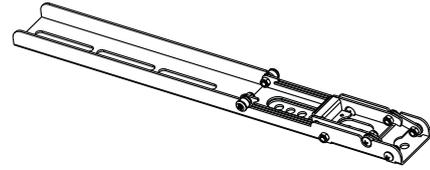

(2)Monitor Bracket-b



 
(4)M4x12 Bolt-c



(4)M5x12 Bolt-d



(4)M6x12 Bolt-e



(4)M8x16 Bolt-f



 
(4)M4 Lock Washer-g




(4)M5 Lock Washer-h




(4)M6 Lock Washer-i




(4)M8 Lock Washer-j

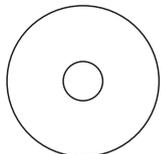


(4)M4/M5 Washer-k

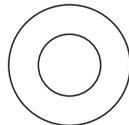


(4)M6/M8 Washer-l

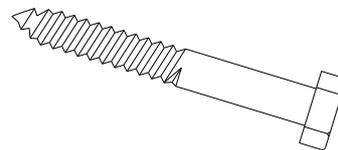

(3)Lag Bolt-m

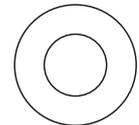

(3)Lag Bolt Washer-n

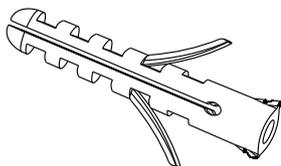


(3)Concrete Anchor-o

Step 1

Mounting the Monitor Brackets to a TV

First of all, make sure the diameter of the Bolt(c,d,e,f) your TV requires. Once you have determined the correct diameter, please see the relative diagram as below. You will thread the Bolt into the TV using the correct Lock Washer(g,h,i,j) and Washer(k,l). Please make sure the Monitor Brackets(b) are vertically centered and level with each other.

M4 Diameter Bolt

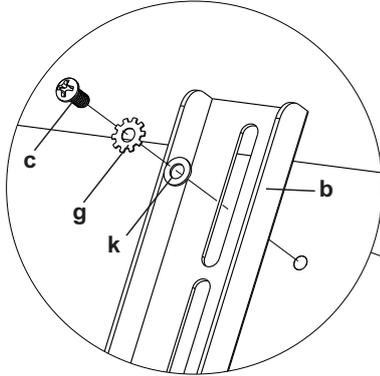

M6 Diameter Bolt



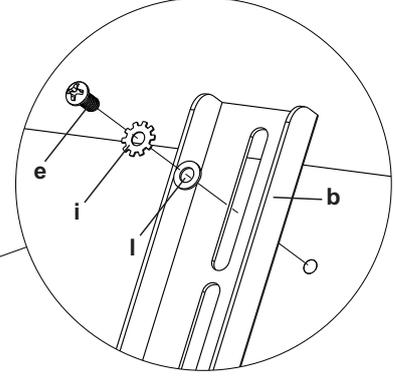



Diagram 1

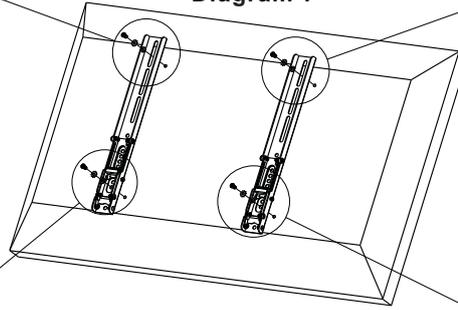

M5 Diameter Bolt

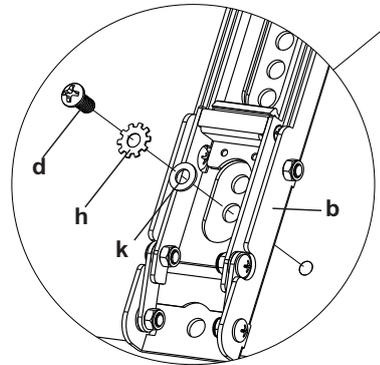

M8 Diameter Bolt

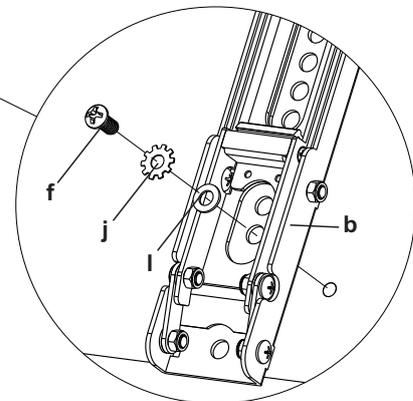


Step 2

Mounting the Wall Plate to the Wall

Brick, Solid Concrete and Concrete Block mounting:

Use the Wall Plate(a) as a template to mark 3 hole locations on the wall. Make sure these holes are level. Pre-Drill these holes with a 8mm masonry bit to at least 50mm in depth. Insert a Concrete Anchor(o) into each of these holes. Make sure the anchor is seated completely flush with the concrete surface even if there is a layer of drywall or other material in front. Attach the Wall Plate to the wall using 3pcs Lag Bolts(m) and 3pcs Lag Bolt Washers(n), shown in Diagram 2.

Diagram 2

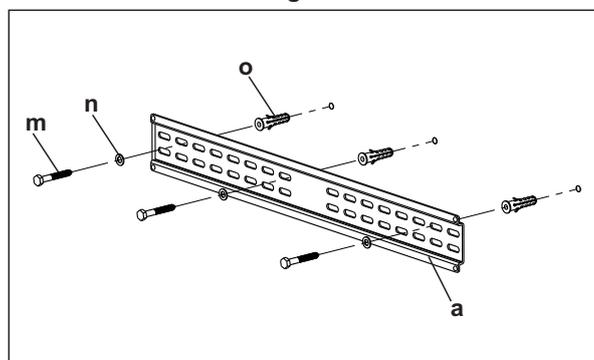

Step 3

Attaching Monitor to Wall Plate

Warning: Some TVs may require two people to lift! We are not responsible for personal injury or product damage.

First hook the Monitor Brackets(b) over the top of the wall Plate(a), then let the bottom of the Monitor Brackets rotate to the wall as shown in the Diagram 3A. Push the bottom of TV to let the tap on the Monitor Brackets clip into the Wall Plate. Then the TV will be fixed on Wall Plate. Pull the bottom of TV to remove the TV from Wall Plate. The finishing looking as shown in the Diagram 3B.

Diagram 3A


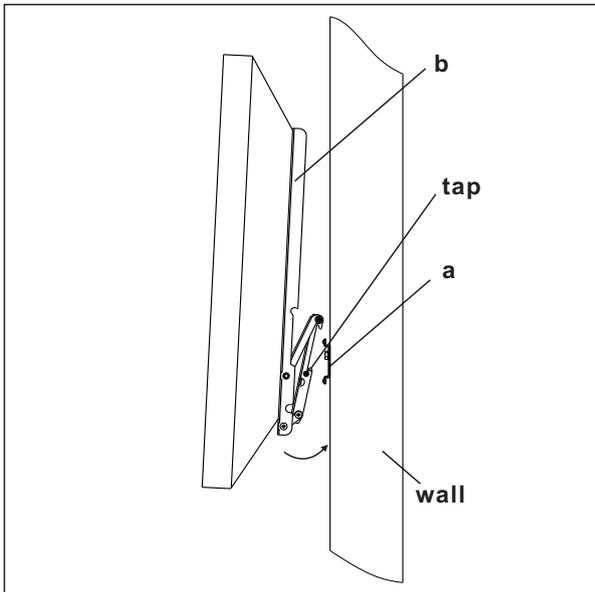


Diagram 3B

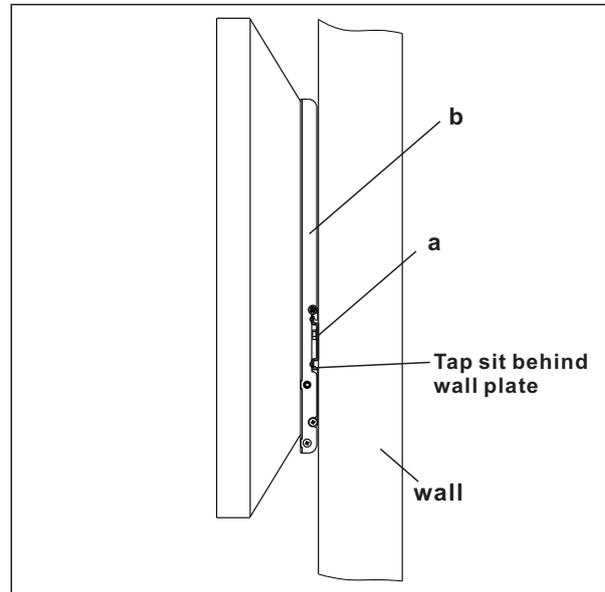


Step 4

Adjust the Tilting Angle by Pull the TV

Pull the top of TV to adjust the tilting angle, and push the top of TV to go back. It have a clamp in the flat position.

Diagram 4

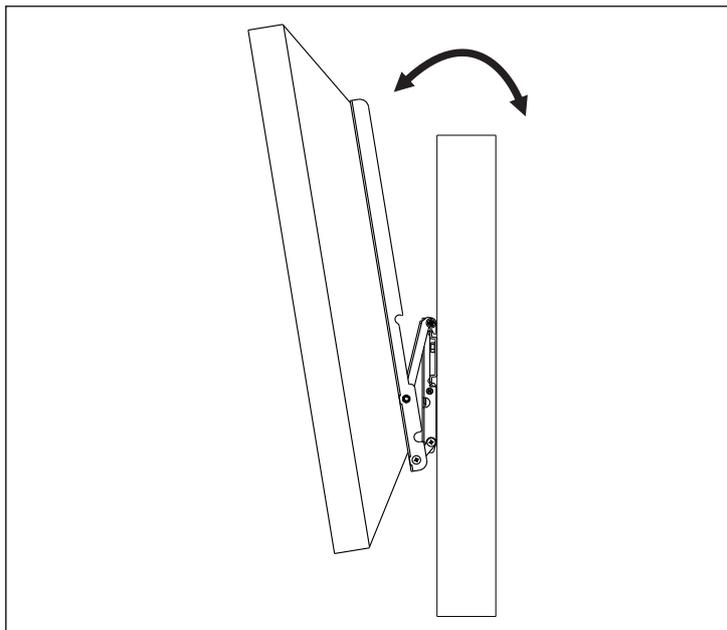

Thanks for choosing our products, enjoy the using.